




Μονόπορτο Ψυγείο

Μοντέλο: DF1-12N2

5207303339522

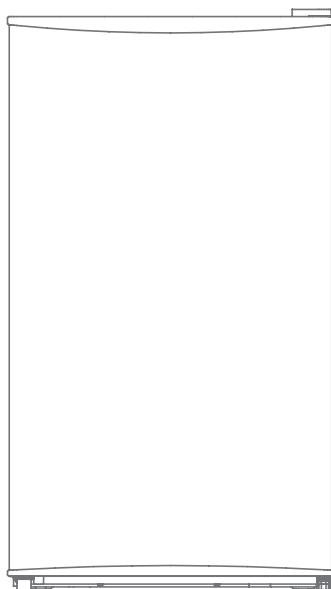

> Προειδοποιητικές σημειώσεις: Πριν χρησιμοποιήσετε αυτό το προϊόν, παρακαλούμε διαβάστε προσεκτικά αυτό το εγχειρίδιο και φυλάξτε το για μελλοντική αναφορά. Η σχεδίαση και τα τεχνικά χαρακτηριστικά υπόκεινται σε αλλαγές χωρίς προειδοποίηση για βελτίωση του προϊόντος. Συμβουλευτείτε τον αντιπρόσωπό σας ή τον κατασκευαστή για λεπτομέρειες. Το παραπάνω διάγραμμα είναι μόνο για αναφορά. Παρακαλούμε λάβετε την εμφάνιση του πραγματικού προϊόντος ως πρότυπο.

Περιεχόμενα

Σημαντικές οδηγίες ασφαλείας	2
Προστασία του περιβάλλοντος	5
Οδηγίες εγκατάστασης	6
Επισκόπηση προϊόντος	9
Οδηγίες λειτουργίας	10
Συντήρηση και καθαρισμός	12
Αντιμετώπιση προβλημάτων	14
Παράρτημα	15

Πριν ενεργοποιήσετε τη συσκευή για πρώτη φορά, διαβάστε τις ακόλουθες υποδείξεις ασφαλείας!

- > Αυτή η συσκευή προορίζεται για χρήση σε οικιακές και παρόμοιες εφαρμογές, όπως κουζίνες προσωπικού σε καταστήματα, γραφεία και άλλα εργασιακά περιβάλλοντα· αγροτικές κατοικίες και από πελάτες σε ξενοδοχεία, μοτέλ και άλλα περιβάλλοντα τύπου κατοικίας· περιβάλλοντα τύπου bed and breakfast· εστίαση και παρόμοιες μη λιανικές εφαρμογές.
- > Αυτή η συσκευή δεν προορίζεται για χρήση από άτομα (συμπεριλαμβανομένων παιδιών) με μειωμένες σωματικές, αισθητήριες ή διανοητικές ικανότητες, ή έλλειψη εμπειρίας και γνώσης, εκτός εάν έχουν λάβει επίβλεψη ή οδηγίες σχετικά με τη χρήση της συσκευής από άτομο υπεύθυνο για την ασφάλειά τους.

Επεξήγηση όρων/συμβόλων

	ΚΙΝΔΥΝΟΣ Αυτό το σύμβολο υποδεικνύει ότι υπάρχουν κίνδυνοι για τη ζωή και την υγεία των ατόμων λόγω εξαιρετικά εύφλεκτου αερίου.
	ΠΡΟΕΙΔΟΠΟΙΗΣΗ Η λέξη σήματος υποδεικνύει κίνδυνο με μέσο επίπεδο κινδύνου που, αν δεν αποφευχθεί, μπορεί να οδηγήσει σε θάνατο ή σοβαρό τραυματισμό.
	ΠΡΟΣΟΧΗ Η λέξη σήματος υποδεικνύει κίνδυνο με χαμηλό βαθμό κινδύνου που, αν δεν αποφευχθεί, μπορεί να οδηγήσει σε ελαφρύ ή μέτριο τραυματισμό.
	ΠΡΟΣΟΧΗ Η λέξη σήματος υποδεικνύει σημαντικές πληροφορίες (π.χ. ζημιά σε περιουσία), αλλά όχι κίνδυνο.

ΣΗΜΑΝΤΙΚΟ: Δώστε ιδιαίτερη προσοχή σε μηνύματα που περιέχουν τις λέξεις **ΚΙΝΔΥΝΟΣ**, **ΠΡΟΕΙΔΟΠΟΙΗΣΗ** ή **ΠΡΟΣΟΧΗ**. Αυτές οι λέξεις χρησιμοποιούνται για να σας προειδοποιήσουν για έναν πιθανό κίνδυνο που μπορεί να προκαλέσει σοβαρό τραυματισμό σε εσάς και σε άλλους. Οι οδηγίες θα σας ενημερώσουν πώς να μειώσετε την πιθανότητα τραυματισμού και τι μπορεί να συμβεί αν δεν ακολουθηθούν οι οδηγίες.

ΠΡΟΣΟΧΗ: Αυτές οι οδηγίες λειτουργίας είναι γενικές. Αυτό σημαίνει ότι ορισμένες λειτουργίες ισχύουν για το ψυγείο/καταψύκτη σας, ενώ άλλες όχι.

Εργαζόμαστε συνεχώς για την περαιτέρω ανάπτυξη και βελτίωση των τύπων και μοντέλων των συσκευών μας. Επομένως, διατηρούμε το δικαίωμα να κάνουμε αλλαγές στο σχεδιασμό, τον εξοπλισμό και τα παρελκόμενα όλων των τύπων και μοντέλων χωρίς προηγούμενη ειδοποίηση.

ΣΗΜΑΝΤΙΚΕΣ ΟΔΗΓΙΕΣ ΑΣΦΑΛΕΙΑΣ

ΔΙΑΒΑΣΤΕ ΚΑΙ ΦΥΛΑΞΤΕ ΑΥΤΕΣ ΤΙΣ ΟΔΗΓΊΕΣ!



ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Κίνδυνος πυρκαγιάς / εύφλεκτο υλικό

Το ψυκτικό μέσο και το αφρώδες υλικό κυκλοπεντανίου που χρησιμοποιούνται στη συσκευή είναι εύφλεκτα. Επομένως, όταν η συσκευή απορρίπτεται, πρέπει να κρατείται μακριά από οποιαδήποτε πηγή φωτιάς και να ανακτάται από ειδική εταιρεία ανάκτησης με αντίστοιχη πιστοποίηση, αντί να απορρίπτεται με καύση, ώστε να αποφεύγεται η ζημιά στο περιβάλλον ή οποιαδήποτε άλλη βλάβη.



ΠΡΟΕΙΔΟΠΟΙΗΣΗ

Γενική Ασφάλεια

- > Τα παιδιά θα πρέπει να επιβλέπονται ώστε να διασφαλίζεται ότι δεν παίζουν με τη συσκευή.
- > Εάν το καλώδιο τροφοδοσίας είναι κατεστραμμένο, πρέπει να αντικατασταθεί από τον κατασκευαστή, τον υπεύθυνο επισκευής ή παρόμοια πιστοποιημένα άτομα για να αποφευχθεί κίνδυνος.
- > Μην αποθηκεύετε εκρηκτικές ουσίες όπως δοχεία αεροζόλ με εύφλεκτο προωθητικό μέσο σε αυτή τη συσκευή.
- > Η συσκευή πρέπει να αποσυνδέεται από το ρεύμα μετά τη χρήση και πριν από την εκτέλεση συντήρησης από τον χρήστη.
- > **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Κρατήστε τις ανοιγές εξαερισμού στη συσκευή ή στη δομή ενσωμάτωσης καθαρές από εμποδία.
- > **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην χρησιμοποιείτε μηχανικές συσκευές ή άλλα μέσα για να επιταχύνετε τη διαδικασία απόψυξης, εκτός από αυτά που συνιστώνται από τον κατασκευαστή.
- > **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην προκαλείτε ζημιά στο κύκλωμα ψυκτικού.
- > **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην χρησιμοποιείτε ηλεκτρικές συσκευές μέσα στα διαμερίσματα αποθήκευσης τροφίμων της συσκευής, εκτός αν είναι τύπου που συνιστά ο κατασκευαστής.
- > **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Παρακαλώ απορρίψτε το ψυγείο σύμφωνα με τους τοπικούς κανονισμούς, καθώς χρησιμοποιεί εύφλεκτο αέριο ψυκτικού και ψυκτικό.
- > **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Κατά τη θέση της συσκευής, βεβαιωθείτε ότι το καλώδιο τροφοδοσίας δεν παγιδεύεται ή δεν έχει υποστεί ζημιά.
- > **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην τοποθετείτε πολλαπλές φορητές πρίζες ή φορητές παροχές ρεύματος στο πίσω μέρος της συσκευής.
- > Μην χρησιμοποιείτε μπαλαντέζες ή μη γεωμένους (δύο ακίδων) αντάπτορες.
- > Για να αποφύγετε κίνδυνο λόγω αστάθειας της συσκευής, πρέπει να στερεωθεί σύμφωνα με τις οδηγίες.
- > Το ψυγείο πρέπει να αποσυνδεθεί από την πηγή ηλεκτρικής τροφοδοσίας πριν από την εγκατάσταση αξεσουάρ. Βεβαιωθείτε ότι το καλώδιο τροφοδοσίας δεν παγιδεύεται από το ψυγείο. Μην πατάτε πάνω στο καλώδιο.



ΠΡΟΣΟΧΗ

Καθημερινή χρήση

- > Μην τραβάτε το καλώδιο τροφοδοσίας όταν τραβάτε το φινι του ψυγείου. Παρακαλούμε κρατήστε σταθερά το φινι και τραβήξτε το απευθείας από την πρίζα.
- > Για να εξασφαλίσετε ασφαλή χρήση, μην προκαλείτε φθορά στο καλώδιο τροφοδοσίας και μην χρησιμοποιείτε το καλώδιο όταν είναι φθαρμένο ή κατεστραμμένο.
- > Παρακαλούμε χρησιμοποιήστε αποκλειστική πρίζα τροφοδοσίας και η πρίζα δεν πρέπει να μοιράζεται με άλλες ηλεκτρικές συσκευές.
- > Το φινι πρέπει να είναι σταθερά συνδεδεμένο με την πρίζα, διαφορετικά μπορεί να προκληθεί πυρκαγιά.
- > Παρακαλούμε βεβαιωθείτε ότι ο ηλεκτρόδιος γείωσης της πρίζας είναι εξοπλισμένος με αξιόπιστη γραμμή γείωσης.
- > Παρακαλούμε κλείστε τη βαλβίδα του διαρρέοντος αερίου και στη συνέχεια ανοίξτε τις πόρτες και τα παράθυρα σε περίπτωση διαρροής αερίου ή άλλων εύφλεκτων αερίων.
- > Μην αποσυνδέετε το ψυγείο και άλλες ηλεκτρικές συσκευές θεωρώντας ότι ο σπινθήρας μπορεί να προκαλέσει πυρκαγιά.
- > Μην χρησιμοποιείτε ηλεκτρικές συσκευές πάνω στη συσκευή, εκτός αν είναι τύπου που συνιστά ο κατασκευαστής.
- > Τα κενά μεταξύ των θυρών του ψυγείου και μεταξύ των θυρών και του σώματος του ψυγείου είναι μικρά, προσέξτε να μην βάζετε το χέρι σας σε αυτές τις περιοχές για να αποφύγετε το σφίξιμο του δακτύλου. Παρακαλώ να είστε προσεκτικοί όταν κλείνετε την πόρτα του ψυγείου για να αποφύγετε την πτώση αντικειμένων.
- > Μην πιάνετε τρόφιμα ή δοχεία με βρεγμένα χέρια στην κατάψυξη όταν το ψυγείο λειτουργεί, ειδικά μεταλλικά δοχεία, για να αποφύγετε τα κρουπαγήματα.
- > Μην επιτρέπετε σε κανένα παιδί να μπει ή να σκαρφαλώσει στο ψυγείο· διαφορετικά μπορεί να προκληθεί ασφυξία ή τραυματισμός από πτώση του παιδιού.
- > Μην τοποθετείτε βαριά αντικείμενα στην κορυφή του ψυγείου, λαμβάνοντας υπόψη ότι τα αντικείμενα μπορεί να πέσουν όταν κλείνετε ή ανοίγετε την πόρτα, προκαλώντας τυχαίους τραυματισμούς.
- > Μην τοποθετείτε εύφλεκτα, εκρηκτικά, πτητικά και ιδιαίτερα διαβρωτικά αντικείμενα στο ψυγείο για να αποφύγετε ζημιές στο προϊόν ή ατυχήματα πυρκαγιάς.
- > Μην τοποθετείτε εύφλεκτα αντικείμενα κοντά στο ψυγείο για να αποφύγετε πυρκαγιές.
- > Το ψυγείο προορίζεται για οικιακή χρήση, όπως αποθήκευση τροφίμων· δεν πρέπει να χρησιμοποιείται για άλλους σκοπούς, όπως αποθήκευση αίματος, φαρμάκων ή βιολογικών προϊόντων κ.λπ.
- > Μην αποθηκεύετε μπίρα, αναψυκτικά ή άλλα υγρά που περιέχονται σε μπουκάλια ή κλειστούς περιέκτες στην κατάψυξη του ψυγείου· ή αλλιώς οι φιάλες ή τα κλειστά δοχεία μπορεί να ραγίσουν λόγω παγώματος προκαλώντας ζημιές.



ΠΡΟΕΙΔΟΠΟΙΗΣΗ

- > Συνδέστε μόνο σε πόσιμο νερό. (Κατάλληλο για κατασκευαστή παγοκύβων)(*)
- > Για να αποτραπεί η παγίδευση παιδιών, τα κλειδιά πρέπει να φυλάσσονται μακριά από τα παιδιά



ΠΡΟΕΙΔΟΠΟΙΗΣΗ

Για το πρότυπο της ΕΕ:

Αυτή η συσκευή μπορεί να χρησιμοποιηθεί από παιδιά ηλικίας από 8 ετών και άνω και από άτομα με μειωμένες σωματικές, αισθητήριες ή διανοητικές ικανότητες ή έλλειψη εμπειρίας και γνώσης, εφόσον υπάρχει επίβλεψη ή τους έχουν δοθεί οδηγίες σχετικά με τη χρήση της συσκευής με ασφαλή τρόπο και κατανοούν τους κινδύνους που εμπλέκονται. Τα παιδιά δεν πρέπει να παίζουν με τη συσκευή. Ο καθαρισμός και η συντήρηση από τον χρήστη δεν πρέπει να γίνονται από παιδιά χωρίς επίβλεψη.

Για να αποφύγετε τη μόλυνση των τροφίμων, παρακαλούμε να τηρείτε τις ακόλουθες οδηγίες:

- Το άνοιγμα της πόρτας για μεγάλα χρονικά διαστήματα μπορεί να προκαλέσει σημαντική αύξηση της θερμοκρασίας στα διαμερίσματα της συσκευής.
- Καθαρίζετε τακτικά τις επιφάνειες που μπορεί να έρχονται σε επαφή με τρόφιμα και τα προσβάσιμα συστήματα αποστράγγισης.
- Καθαρίστε τις δεξαμενές νερού εάν δεν έχουν χρησιμοποιηθεί για 48 ώρες· ξεπλύνετε το σύστημα νερού που συνδέεται με παροχή νερού εάν δεν έχει αντληθεί νερό για 5 ημέρες. (Σημείωση 1) (*)
- Αποθηκεύστε ωμό κρέας και ψάρι σε κατάλληλα δοχεία στο ψυγείο, ώστε να μην έρχονται σε επαφή ή να στάζουν πάνω σε άλλα τρόφιμα.
- Τα διαμερίσματα κατάψυξης δύο αστέρων είναι κατάλληλα για την αποθήκευση προκατεψυγμένων τροφίμων, την αποθήκευση ή την παρασκευή παγωτού και την παρασκευή παγοκύβων. (Σημείωση 2) (*)
- Τα διαμερίσματα 1 αστέρα, 2 αστέρων και 3 αστέρων δεν είναι κατάλληλα για την κατάψυξη φρέσκων τροφίμων. (Σημείωση 3) (*)
- Για συσκευές χωρίς διαμέρισμα 4 αστέρων: αυτή η ψυκτική συσκευή δεν είναι κατάλληλη για την κατάψυξη τροφίμων. (Σημείωση 4) (*)

- Εάν η ψυκτική συσκευή παραμένει κενή για μεγάλα χρονικά διαστήματα, απενεργοποιήστε, αποψύξτε, καθαρίστε, στεγνώστε και αφήστε την πόρτα ανοιχτή για να αποτρέψετε την ανάπτυξη μούχλας μέσα στη συσκευή.

ΠΡΟΣΤΑΣΙΑ ΤΟΥ ΠΕΡΙΒΑΛΛΟΝΤΟΣ

Απόρριψη παλαιών ηλεκτρικών συσκευών με φιλικό προς το περιβάλλον τρόπο



Αυτό το σύμβολο με τον διαγραμμένο τροχήλατο κάδο υποδεικνύει ότι τα απόβλητα ηλεκτρικών και ηλεκτρονικών προϊόντων (ΑΗΗΕ) πρέπει να απορρίπτονται ξεχωριστά από τα αστικά απορρίμματα.

Τα παλιά ηλεκτρικά προϊόντα μπορεί να περιέχουν επικίνδυνες ουσίες, επομένως η σωστή απόρριψη της παλιάς σας συσκευής θα βοηθήσει στην πρόληψη πιθανών αρνητικών συνεπειών για το περιβάλλον και την ανθρώπινη υγεία. Η παλιά σας συσκευή μπορεί να περιέχει επαναχρησιμοποιήσιμα εξαρτήματα που μπορούν να χρησιμοποιηθούν για την επισκευή άλλων προϊόντων, καθώς και άλλα πολύτιμα υλικά που μπορούν να ανακυκλωθούν για τη διατήρηση των περιορισμένων πόρων.

Πληροφορίες συσκευασίας



Τα υλικά συσκευασίας του προϊόντος κατασκευάζονται από ανακυκλώσιμα υλικά σύμφωνα με τους Εθνικούς Κανονισμούς Περιβάλλοντος. Μην απορρίπτετε τα υλικά συσκευασίας μαζί με τα οικιακά ή άλλα απορρίμματα. Πάρτε τα στα σημεία συλλογής υλικών συσκευασίας που έχουν οριστεί από τις τοπικές αρχές.

ΠΡΟΣΟΧΗ

Το ψυκτικό μέσο και το αφρώδες υλικό κυκλοπεντανίου που χρησιμοποιούνται στο ψυγείο είναι εύφλεκτα. Επομένως, όταν το ψυγείο απορρίπτεται, πρέπει να διατηρείται μακριά από οποιαδήποτε πηγή φωτιάς και να ανακτάται από ειδική εταιρεία ανάκτησης με την αντίστοιχη πιστοποίηση, αντί να απορρίπτεται με καύση, ώστε να αποφεύγονται βλάβες στο περιβάλλον ή άλλες ζημιές.

ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ

Πριν από την πρώτη χρήση

Αφαιρέστε τη συσκευασία εξωτερικά και εσωτερικά, σκουπίστε το εξωτερικό σχολαστικά με ένα μαλακό στεγνό πανί και το εσωτερικό με ένα υγρό, χλιαρό πανί.


Αποφύγετε να τοποθετήσετε το ντουλάπι σε στενό χώρο ή κοντά σε οποιαδήποτε πηγή θερμότητας, άμεσο ηλιακό φως ή υγρασία.

Διατηρήστε ελεύθερη την κυκλοφορία του αέρα γύρω από το ντουλάπι. Κατά την εγκατάσταση της μονάδας, εξασφαλίστε 10 εκ. ελεύθερο χώρο και στις δύο πλευρές, 10 εκ. στο πάνω μέρος της μονάδας και όχι περισσότερο από 7,5 εκ. στο πίσω μέρος της μονάδας.

Πριν συνδέσετε το ψυγείο στην τροφοδοσία ρεύματος, ελέγξτε ότι η τάση που αναγράφεται στην ετικέτα αξιολόγησης της συσκευής αντιστοιχεί στην τάση του σπιτιού σας. Μια διαφορετική τάση μπορεί να προκαλέσει ζημιά στη συσκευή.

Η συσκευή πρέπει να είναι γειωμένη. Ο κατασκευαστής δεν φέρει ευθύνη για ζημιές που μπορεί να προκύψουν από χρήση χωρίς γείωση.


Διάγραμμα απαιτήσεων χώρου

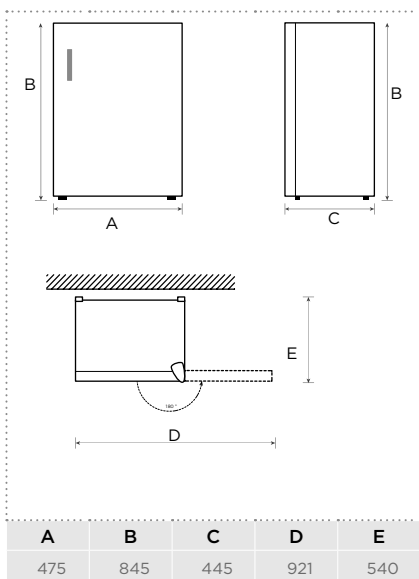

Σημείωση: Όλες οι διαστάσεις σε mm

Σύνδεση της συσκευής

Μετά την εγκατάσταση του προϊόντος, αφήστε το να σταθεί για περισσότερες από 2 ώρες πριν ενεργοποιήσετε την τροφοδοσία, διαφορετικά μπορεί να μειωθεί η ψυκτική ικανότητα ή να προκληθεί ζημιά στο προϊόν.

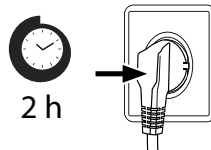

Αφήστε τη συσκευή να λειτουργήσει άδεια για 24 ώρες ώστε το διαμέρισμα να ψυχθεί στην κατάλληλη θερμοκρασία.

⚠ ΠΡΟΣΟΧΗ

Το ψυγείο πρέπει πάντα να είναι συνδεδεμένο σε ξεχωριστή ηλεκτρική πρίζα που έχει βαθμολογία τάσης που ταιριάζει με την πινακίδα χαρακτηριστικών.

Κατά τη θέση της συσκευής, βεβαιωθείτε ότι το καλώδιο τροφοδοσίας δεν παγιδεύεται ή δεν έχει υποστεί ζημιά.

Θερμοκρασία περιβάλλοντος

Ανάλογα με την κλιματική κλάση, αυτό το ψυγείο προορίζεται να χρησιμοποιείται σε εύρος θερμοκρασίας περιβάλλοντος όπως καθορίζεται στον παρακάτω πίνακα.

Το προϊόν ενδέχεται να μην λειτουργεί σωστά σε θερμοκρασίες εκτός του συγκεκριμένου εύρους.

Μπορείτε να βρείτε την κλιματική κλάση στην ετικέτα του προϊόντος.

Κλιματική Κατηγορία	Θερμοκρασία Περιβάλλοντος
SN	+10 °C έως +32 °C
N	+16 °C έως +32 °C
ST	+16 °C έως +38 °C
T	+16 °C έως +43 °C

Εάν έχετε οποιαδήποτε αμφιβολία σχετικά με την εγκατάσταση, παρακαλούμε απευθυνθείτε στον πωλητή, στην εξυπηρέτηση πελατών μας ή στο πλησιέστερο Εξουσιοδοτημένο Κέντρο Σέρβις.

⚠ ΠΡΟΣΟΧΗ

Η απόδοση ψύξης και η κατανάλωση ρεύματος του ψυγείου μπορεί να επηρεαστούν από τη θερμοκρασία

Μετακίνηση της συσκευής

1. Αφαιρέστε όλα τα αντικείμενα από τη συσκευή.
2. Αφαιρέστε το φως του ρεύματος, τοποθετήστε το και στερεώστε το στο γάντζο του φως στο πίσω μέρος ή στην κορυφή της συσκευής.
3. Ταινία σε εξαρτήματα όπως ράφια και πόρτα για να αποτραπεί η πτώση τους κατά τη μετακίνηση της συσκευής.
4. Μετακινήστε τη συσκευή με περισσότερα από δύο άτομα προσεκτικά. Κατά τη μεταφορά της συσκευής σε μεγάλη απόσταση, κρατήστε τη συσκευή σε όρθια θέση.

Πόδια ρύθμισης επιπέδου

Για να αποφύγετε κραδασμούς, η συσκευή πρέπει να είναι σε επίπεδο.

Εάν απαιτείται, ρυθμίστε τα πόδια ρύθμισης επιπέδου για να αντισταθμίσετε το ανώμαλο δάπεδο.

Το μπροστινό μέρος πρέπει να είναι ελαφρώς ψηλότερο από το πίσω για να βοηθά στο κλείσιμο της πόρτας.

Τα πόδια ρύθμισης επιπέδου μπορούν να γυριστούν εύκολα γέροντας ελαφρώς το περίβλημα.

Γυρίστε τα πόδια ρύθμισης επιπέδου

αριστερόστροφα  για να ανυψώσετε τη μονάδα, δεξιόστροφα  για να τη χαμηλώσετε.

Αλλαγή του φωτισμού

Οποιαδήποτε αντικατάσταση ή συντήρηση των λαμπτήρων LED προορίζεται να γίνει από τον κατασκευαστή, τον υπεύθυνο επισκευής ή παρόμοιο εξειδικευμένο άτομο.

ΠΡΟΣΟΧΗ

Μετά τη σύνδεση του καλωδίου τροφοδοσίας (ή του φως) στην πρίζα, περιμένετε 2 ή 3 ώρες πριν τοποθετήσετε τρόφιμα στη συσκευή. Εάν προσθέσετε τρόφιμα πριν η συσκευή κρυώσει εντελώς, τα τρόφιμά σας μπορεί να χαλάσουν.

Συμβουλές για εξοικονόμηση ενέργειας

Μην τοποθετείτε τη συσκευή κοντά σε κουζίνες, καλοριφέρ ή άλλες πηγές θερμότητας. Εάν η θερμοκρασία περιβάλλοντος είναι υψηλή, ο συμπιεστής θα λειτουργεί πιο συχνά και για μεγαλύτερο χρονικό διάστημα, με αποτέλεσμα αυξημένη κατανάλωση ενέργειας.

Βεβαιωθείτε ότι υπάρχει επαρκής εξαερισμός στη βάση της συσκευής, στις πλευρές και στο πίσω μέρος της συσκευής.

Παρακαλούμε επίσης να τηρείτε τις διαστάσεις αποστάσεων στο κεφάλαιο «Εγκατάσταση».

Η διάταξη των συρταριών, ραφιών και δίσκων όπως φαίνεται στην επισκόπηση προϊόντος προσφέρει την πιο αποδοτική χρήση ενέργειας και θα πρέπει να διατηρείται όσο το δυνατόν περισσότερο.

Για να αποκτήσετε μεγαλύτερο χώρο αποθήκευσης (π.χ. για μεγάλα ψυγμένα/κατεψυγμένα είδη), τα μεσαία συρτάρια και ράφια μπορούν να αφαιρεθούν. Τα πάνω και κάτω συρτάρια και ράφια πρέπει να αφαιρούνται τελευταία, αν χρειάζεται.

Ένα ομοιόμορφα γεμάτο διαμέρισμα ψυγείου/καταψύκτη συμβάλλει στη βέλτιστη χρήση ενέργειας.

Αφήστε το ζεστό φαγητό να κρυώσει πριν το τοποθετήσετε στο διαμέρισμα ψυγείου/καταψύκτη. Το φαγητό που έχει ήδη κρυώσει αυξάνει την ενεργειακή απόδοση.

Αφήστε το κατεψυγμένο φαγητό να αποψυχθεί στο διαμέρισμα ψύξης. Το κρύο του κατεψυγμένου φαγητού μειώνει την κατανάλωση ενέργειας στο διαμέρισμα ψυγείου και έτσι αυξάνει την ενεργειακή απόδοση.

Ανοίγετε την πόρτα μόνο όσο σύντομα είναι απαραίτητο για να ελαχιστοποιήσετε την απώλεια ψύχους. Το σύντομο άνοιγμα της πόρτας και το σωστό κλείσιμό της μειώνει την κατανάλωση ενέργειας.

Η ρύθμιση της θερμοκρασίας όχι πιο κρύα από το αναγκαίο συμβάλλει στη βέλτιστη χρήση ενέργειας.

Οι φλάντζες της πόρτας της συσκευής σας πρέπει να είναι σε άριστη κατάσταση ώστε οι πόρτες να κλείνουν σωστά και να μην αυξάνεται άσκοπα η κατανάλωση ενέργειας.


Αλλαγή Πόρτας Δεξιά-Αριστερά

Κατάλογος εργαλείων που πρέπει να παρέχει ο χρήστης


	Σταυροκατσάβιδο
	Κατσαβίδι με λεπτή λάμα
	Κλειδί καρυδάκι 5/16"
	Μονωτική ταινία

Βήμα:


1. Απενεργοποιήστε το ψυγείο και αφαιρέστε όλα τα αντικείμενα από τα ράφια της πόρτας.
2. Αποσυναρμολογήστε το κάλυμμα του μεντεσέ, τις βίδες και τον επάνω μεντεσέ, και αφαιρέστε το καπάκι της οπής και τα πείρους από την άλλη πλευρά.

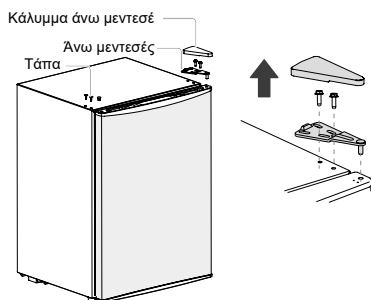


3. Αφαιρέστε πρώτα την πόρτα, στη συνέχεια αφαιρέστε τη κάτω άρθρωση και το ρυθμιζόμενο πόδι, ανταλλάξτε τις θέσεις της κάτω άρθρωσης και του ρυθμιζόμενου ποδιού και εγκαταστήστε τα.

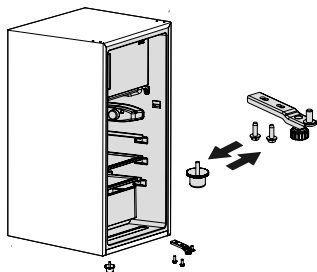

4. Αποσυναρμολογήστε το στοπ κάτω από την πόρτα, στη συνέχεια συναρμολογήστε το στοπ στην άλλη πλευρά.

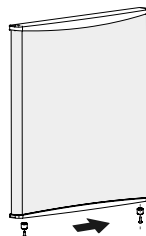


5. Εγκαταστήστε την πόρτα στην κάτω άρθρωση και στη συνέχεια εγκαταστήστε την πάνω άρθρωση, το κάλυμμα άρθρωσης, τα πείρους και το καπάκι οπής με τη σειρά.

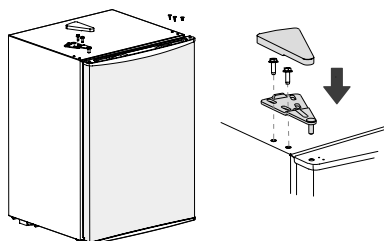

Η παραπάνω εικόνα είναι μόνο για αναφορά. Η πραγματική διαμόρφωση θα εξαρτηθεί από το φυσικό προϊόν ή τη δήλωση του διανομέα.

ΕΠΙΣΚΟΠΗΣΗ ΠΡΟΪΟΝΤΟΣ

Μέρη και λειτουργίες

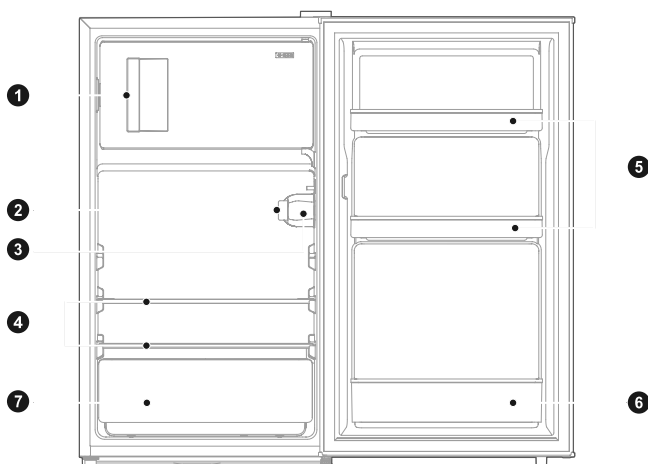

- | | | | |
|---|------------------------------|---|-------------------------------|
| 1 | Μικρή πόρτα | 5 | Μικρά ράφια |
| 2 | Κουμπί ρύθμισης θερμοκρασίας | 6 | Μεγάλο ράφι |
| 3 | Λάμπα | 7 | Συρτάρι φρούτων και λαχανικών |
| 4 | Ράφια | | |

- > Για την πιο αποδοτική χρήση ενέργειας, παρακαλούμε να διατηρείτε όλα τα εσωτερικά αντικείμενα όπως δίσκους, συρτάρια, ράφια και το κουτί παγοκύβων στις θέσεις που παρέχονται από τον κατασκευαστή.
- > Αυτή η ψυκτική συσκευή πρέπει να εγκαθίσταται ανεξάρτητα και δεν μπορεί να χρησιμοποιηθεί ως εντοιχισμένη. Διαφορετικά, θα προκληθούν προβλήματα όπως η μείωση της απόδοσης και της διάρκειας ζωής της συσκευής. Και ο κατασκευαστής δεν παρέχει βασική εγγύηση για τη συσκευή.


ΠΡΟΣΟΧΗ

Διαφορές: Λόγω τεχνικών αλλαγών και διαφορετικών μοντέλων, ορισμένες από τις εικόνες σε αυτό το εγχειρίδιο μπορεί να διαφέρουν από το μοντέλο σας.


ΟΔΗΓΙΕΣ ΛΕΙΤΟΥΡΓΙΑΣ

Χρήση και λειτουργίες

Πίνακας χαρακτηριστικών

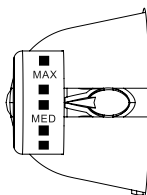1

- > Γυρίστε το κουμπί ρύθμισης θερμοκρασίας στο MAX, η εσωτερική θερμοκρασία του ψυγείου γίνεται χαμηλότερη.
- > Γυρίστε το κουμπί ρύθμισης θερμοκρασίας στο MIN, η εσωτερική θερμοκρασία του ψυγείου γίνεται υψηλότερη.
- > Το γράμμα στο κουμπί αντιπροσωπεύει μόνο το επίπεδο, αλλά δεν σημαίνει συγκεκριμένη θερμοκρασία, το "OFF" σημαίνει διακοπή λειτουργίας.
- > Συνιστώμενη ρύθμιση: "MED".
- > Εάν δεν υπάρχουν ειδικές ανάγκες, παρακαλώ αποφύγετε να ρυθμίζετε το κουμπί στο MAX συνεχώς ώστε να αποτρέψετε το πάγωμα της φούσκας της δεξαμενής.

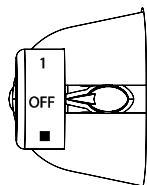2

Οι αριθμοί δεν σημαίνουν συγκεκριμένη ρυθμισμένη θερμοκρασία, αλλά το επίπεδο θερμοκρασίας.

- > Το "1" σημαίνει τη θερμότερη ρύθμιση.
- > Το "4" σημαίνει τη ψυχρότερη ρύθμιση.
- > Όσο μεγαλύτερος είναι ο αριθμός, τόσο χαμηλότερη είναι η πραγματική θερμοκρασία μέσα στο ψυγείο, το "OFF" σημαίνει διακοπή λειτουργίας.
- > Συνιστώμενη ρύθμιση: "3" επίπεδα.
- > Συνιστάται να ρυθμίζετε και να χρησιμοποιείτε στο εύρος 1-4 επιπέδων. Η υπέρβαση αυτού του εύρους μπορεί να προκαλέσει χαμηλή θερμοκρασία στο ψυγείο.



ΠΡΟΣΟΧΗ

Ο πραγματικός πίνακας ελέγχου μπορεί να διαφέρει ανάλογα με το μοντέλο.

Αποθήκευση τροφίμων

Θάλαμος καταψύκτη

Ο θάλαμος καταψύκτη προορίζεται για την κατάψυξη τροφίμων σε χαμηλή θερμοκρασία, την μακροχρόνια αποθήκευση κατεψυγμένων τροφίμων και για την παραγωγή παγοκύβων.

Δώστε προσοχή στις ταξινόμήσεις με αστέρια (4 αστέρια, 2 αστέρια και 1 αστέρι) στον θάλαμο καταψύκτη και στις αντίστοιχες περιόδους αποθήκευσης για τα κατεψυγμένα τρόφιμα.

Μην τοποθετείτε φρέσκα και κατεψυγμένα τρόφιμα δίπλα-δίπλα. Τα κατεψυγμένα τρόφιμα μπορεί να αποψυχθούν.

Όταν καταψύχετε μεγάλες ποσότητες φρέσκων τροφίμων (όπως κρέας, ψάρι ή κιμά), παρακαλούμε να τα χωρίσετε σε μικρότερα κομμάτια πριν τα βάλετε, ώστε να παγώσουν γρήγορα και να είναι εύκολη η λήψη τους.

Τηρείτε τους χρόνους αποθήκευσης που προτείνουν οι κατασκευαστές τροφίμων στις συσκευασίες. Εάν δεν υπάρχει πληροφορία στη συσκευασία, τα τρόφιμα δεν πρέπει να αποθηκεύονται κατεψυγμένα για περισσότερο από τρεις μήνες από την ημερομηνία αγοράς.

Κατά την αγορά κατεψυγμένων τροφίμων, βεβαιωθείτε ότι έχουν καταψυχθεί σε κατάλληλη θερμοκρασία και ότι η συσκευασία δεν είναι κατεστραμμένη.

Τα κατεψυγμένα τρόφιμα πρέπει να διατηρούνται σε κατάλληλες ατομικές συσκευασίες για να διασφαλιστεί ότι τα γειτονικά τρόφιμα δεν μπορούν να μολυνθούν. Καταναλώστε τα αποψυγμένα τρόφιμα αμέσως, μην τα καταψύχετε ξανά.

Σε περίπτωση παρατεταμένης διακοπής ρεύματος ή βλάβης της συσκευής, αφαιρέστε τα αποθηκευμένα κατεψυγμένα τρόφιμα και ελέγξτε αν είναι ακόμα βρώσιμα, στη συνέχεια αποθηκεύστε τα σε επαρκώς δροσερό μέρος ή σε άλλη συσκευή.

Για να αποψύξετε τρόφιμα, αφαιρέστε τα από την κατάψυξη και αφήστε τα να αποψυχθούν σε θερμοκρασία δωματίου ή στο ψυγείο. Για γρήγορη απόψυξη τροφίμων, μπορείτε να χρησιμοποιήσετε τη λειτουργία απόψυξης στο φούρνο μικροκυμάτων, για παράδειγμα.

Εάν θέλετε να αποψύξετε μόνο μέρος μιας συσκευασίας, αφαιρέστε το τμήμα που χρειάζεστε και κλείστε αμέσως το υπόλοιπο της συσκευασίας. Με αυτόν τον τρόπο, θα αποψύγετε το «κάψιμο κατάψυξης» και θα μειώσετε το σχηματισμό πάγου στα υπόλοιπα τρόφιμα.

ΣΥΝΤΗΡΗΣΗ ΚΑΙ ΚΑΘΑΡΙΣΜΟΣ



ΠΡΟΣΟΧΗ

Αποσυνδέστε τη συσκευή από την ηλεκτρική παροχή πριν από οποιαδήποτε τακτική συντήρηση. Αφήστε τουλάχιστον 5 λεπτά πριν επανεκκινήσετε τη συσκευή, καθώς η συχνή εκκίνηση μπορεί να βλάψει τον συμπίεστή.

Μην χρησιμοποιείτε μηχανικές συσκευές ή άλλα μέσα για να επιταχύνετε τη διαδικασία της απόψυξης, εκτός από εκείνα που συνιστώνται από τον κατασκευαστή.

Μην προσπαθείτε να επισκευάσετε, να αποσυναρμολογήσετε ή να τροποποιήσετε τη συσκευή μόνοι σας. Σε περίπτωση επισκευής, παρακαλούμε επικοινωνήστε με την εξυπηρέτηση πελατών μας.

Αφαιρέστε τη σκόνη από το πίσω μέρος της μονάδας τουλάχιστον μία φορά το χρόνο για να αποφύγετε κίνδυνο πυρκαγιάς, καθώς και αυξημένη κατανάλωση ενέργειας.

Ελέγχετε τακτικά το λάστιχο της πόρτας για να βεβαιωθείτε ότι δεν υπάρχουν υπολείμματα. Καθαρίστε το λάστιχο της πόρτας με ένα μαλακό πανί βρεγμένο με σαπουνόνερο ή αραιωμένο απορρυπαντικό.

Το εσωτερικό του προϊόντος πρέπει να καθαρίζεται τακτικά για να αποφεύγεται η οσμή.

Χρησιμοποιήστε ένα μαλακό πανί ή σφουγγάρι για να καθαρίσετε το εσωτερικό του προϊόντος, με δύο κουταλιές της σούπας μαγειρική σόδα και ένα λίτρο ζεστό νερό. Στη συνέχεια ξεπλύνετε με νερό και σκουπίστε καθαρά. Μετά τον καθαρισμό, ανοίξτε την πόρτα και αφήστε να στεγνώσει φυσικά πριν ενεργοποιήσετε την τροφοδοσία ρεύματος.

Για περιοχές που είναι δύσκολο να καθαριστούν στο προϊόν (όπως στενά κενά, σχισμές ή γωνίες), συνιστάται να τα σκουπίζετε τακτικά με ένα μαλακό πανί, μαλακή βούρτσα κ.λπ. και όταν χρειάζεται, σε συνδυασμό με κάποια βοηθητικά εργαλεία (όπως λεπτά ξυλάκια) για να διασφαλιστεί ότι δεν συσσωρεύονται ρύποι ή βακτήρια σε αυτές τις περιοχές.


Σκουπίστε την εξωτερική επιφάνεια του προϊόντος με ένα μαλακό πανί βρεγμένο με σαπουνόνερο, απορρυπαντικό κ.λπ., και στη συνέχεια σκουπίστε στεγνά.

Μην χρησιμοποιείτε σκληρές βούρτσες, καθαρά απάλινα σφαιρίδια, σύρματα βούρτσας, λειανικά (όπως οδοντόκρεμες), οργανικούς διαλύτες (όπως αλκοόλη, ακετόνη, ισοαμυλική ακετάτη κ.λπ.), βραστό νερό, οξέα ή αλκαλικά υλικά, που μπορεί να καταστρέψουν την επιφάνεια και το εσωτερικό του ψυγείου. Το βραστό νερό και οι οργανικοί διαλύτες όπως η βενζίνη μπορεί να παραμορφώσουν ή να καταστρέψουν πλαστικά εξαρτήματα.

Καθαρισμός δίσκου πόρτας


Σύμφωνα με το βέλος κατεύθυνσης στην παρακάτω εικόνα, χρησιμοποιήστε και τα δύο χέρια για να πιέσετε τον δίσκο και να τον ωθήσετε προς τα πάνω, τότε μπορείτε να τον αφαιρέσετε.

Μετά το πλύσιμο του δίσκου που έχει αφαιρεθεί, μπορείτε να ρυθμίσετε το ύψος εγκατάστασής του σύμφωνα με τις ανάγκες σας.

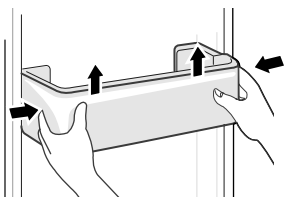

Καθαρισμός του συρταριού λαχανικών


1. Αφαιρέστε το περιεχόμενο του συρταριού. Κρατήστε τη λαβή του συρταριού λαχανικών και τραβήξτε το εντελώς μέχρι να σταματήσει.
2. Ανασηκώστε το συρτάρι λαχανικών και αφαιρέστε το τραβώντας το έξω.

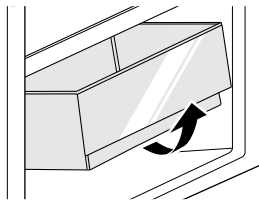

Καθαρισμός του γυάλινου ραφιού

Καθώς το εσωτερικό μέρος της επένδυσης του ψυγείου που έρχεται σε επαφή με τα ράφια έχει ένα εμπόδιο, πρέπει να σηκώσετε τα ράφια προς τα πάνω, ώστε να μπορείτε να τα αφαιρέσετε.

Ρυθμίστε ή καθαρίστε τα ράφια σύμφωνα με τις ανάγκες σας.

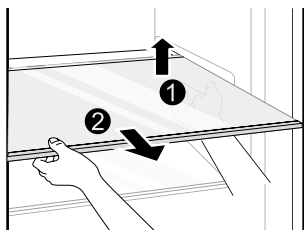

ΑΝΤΙΜΕΤΩΠΙΣΗ ΠΡΟΒΛΗΜΑΤΩΝ

Τα ακόλουθα απλά προβλήματα μπορούν να αντιμετωπιστούν από τον χρήστη. Παρακαλούμε καλέστε το τμήμα εξυπηρέτησης μετά την πώληση εάν τα προβλήματα δεν επιλυθούν.

Πρόβλημα	Πιθανές Αιτίες	Λύση
Δεν λειτουργεί	- Η τροφοδοσία ρεύματος δεν είναι ενεργοποιημένη και το φως δεν είναι καλά εισαγμένο. - Χαμηλή τάση, διακοπή ρεύματος ή κάποιο μέρος του κυκλώματος έχει διακοπεί.	- Εισάγετε καλά το φως του καλωδίου τροφοδοσίας. - Ελέγξτε την τροφοδοσία ρεύματος στο σπίτι.
Ο συμπιεστής λειτουργεί για μεγάλο χρονικό διάστημα	- Υψηλή θερμοκρασία περιβάλλοντος που προκαλεί μακρά διάρκεια λειτουργίας. - Τοποθέτηση υπερβολικής ποσότητας τροφίμων ταυτόχρονα. - Τα τρόφιμα τοποθετούνται πριν κρυώσουν. - Άνοιγμα της πόρτας πολύ συχνά. - Το στρώμα πάγου στο εσωτερικό είναι πολύ παχύ.	- Αυτό είναι φυσιολογικό. - Μην τοποθετείτε υπερβολική ποσότητα τροφίμων ταυτόχρονα. - Περιμένετε μέχρι να κρυώσουν τα τρόφιμα πριν τα τοποθετήσετε. - Μην ανοίγετε την πόρτα πολύ συχνά. - Απαιτείται απόψυξη.
Η πόρτα δεν κλείνει σωστά	- Η πόρτα έχει κολλήσει με αντικείμενα. - Πάρα πολλά τρόφιμα. - Η φλάντζα της πόρτας έχει παραμορφωθεί.	- Μην τοποθετείτε υπερβολική ποσότητα τροφίμων. - Τοποθετήστε τη συσκευή σταθερά. - Ζεστάνετε τη φλάντζα της πόρτας, στη συνέχεια κρυώστε την για αποκατάσταση (με ηλεκτρικό στεγνωτήρα ή ζεστό νερό για θέρμανση).
Η εξωτερική επιφάνεια είναι ζεστή	- Όταν η συσκευή λειτουργεί, η θερμότητα διαχέεται προς τα έξω μέσω των μεταλλικών σωλήνων στο εσωτερικό του θαλάμου. - Οι υψηλότερες θερμοκρασίες περιβάλλοντος το καλοκαίρι προκαλούν αύξηση της θερμοκρασίας του εξωτερικού τοιχώματος.	- Η υψηλότερη θερμοκρασία στο εξωτερικό τοίχωμα είναι φυσιολογική. - Αυξήστε τον χώρο απαγωγής θερμότητας ή τοποθετήστε τη συσκευή σε αεριζόμενο και δροσερό μέρος.
Οσμές	- Χαλασμένο φαγητό - Φαγητό με έντονες οσμές - Το εσωτερικό διαμέρισμα είναι βρώμικο.	- Καθαρίστε και αφαιρέστε τυχόν χαλασμένο φαγητό. - Βεβαιωθείτε ότι το φαγητό με έντονες οσμές είναι σφραγισμένο αεροστεγώς. - Καθαρίστε το εσωτερικό διαμέρισμα.
Σχηματίζεται συμπύκνωση στο εξωτερικό	Η συμπύκνωση μπορεί να σχηματιστεί όταν η υγρασία στο δωμάτιο είναι υψηλή.	Αυτό είναι φυσιολογικό. Σκουπίστε τη συμπύκνωση με ένα στεγνό πανί.
Δύσκολο να ανοίξει η πόρτα	Η διαφορά πίεσης αέρα μεταξύ του εσωτερικού και του εξωτερικού του διαμερίσματος μπορεί μερικές φορές να δυσκολεύει το άνοιγμα της πόρτας της κατάψυξης.	Περιμένετε λίγα λεπτά και στη συνέχεια προσπαθήστε να ανοίξετε την πόρτα αργά.

Κατά τη φυσιολογική χρήση του ψυγείου μπορεί να ακουστούν ορισμένοι ήχοι, οι οποίοι δεν επηρεάζουν τη σωστή λειτουργία του.

Ήχοι που μπορούν εύκολα να προληφθούν:

- > Θόρυβος που προκαλείται από τη συσκευή όταν δεν είναι επίπεδη - ρυθμίστε τη θέση με τα ρυθμιζόμενα μπροστινά πόδια. Εναλλακτικά, τοποθετήστε μαξιλαράκια από μαλακό υλικό κάτω από τους πίσω τροχούς, ειδικά όταν η συσκευή τοποθετείται σε πλακάκια.

ΠΑΡΑΡΤΗΜΑ

Ειδικό για το νέο ευρωπαϊκό πρότυπο

Τα παραγγελθέντα εξαρτήματα στον παρακάτω πίνακα μπορούν να αποκτηθούν από το κανάλι παροχής υπηρεσιών

Παραγγελθείσα ανταλλακτική μονάδα	Παρέχεται από	Ελάχιστος απαιτούμενος χρόνος για την παροχή
Θερμοστάτες	Επαγγελματικό προσωπικό συντήρησης	Τουλάχιστον 7 χρόνια μετά την κυκλοφορία του τελευταίου μοντέλου στην αγορά
Αισθητήρες θερμοκρασίας	Επαγγελματικό προσωπικό συντήρησης	Τουλάχιστον 7 χρόνια μετά την κυκλοφορία του τελευταίου μοντέλου στην αγορά
Εκτυπωμένες πλακέτες κυκλωμάτων	Επαγγελματικό προσωπικό συντήρησης	Τουλάχιστον 7 χρόνια μετά την κυκλοφορία του τελευταίου μοντέλου στην αγορά
Πηγές φωτός	Επαγγελματικό προσωπικό συντήρησης	Τουλάχιστον 7 χρόνια μετά την κυκλοφορία του τελευταίου μοντέλου στην αγορά
Λαβές πόρτας	Επαγγελματίες τεχνικοί και τελικοί χρήστες	Τουλάχιστον 7 χρόνια μετά την κυκλοφορία του τελευταίου μοντέλου στην αγορά
Μεντεσέδες πόρτας	Επαγγελματίες τεχνικοί και τελικοί χρήστες	Τουλάχιστον 7 χρόνια μετά την κυκλοφορία του τελευταίου μοντέλου στην αγορά
Ράφια	Επαγγελματίες τεχνικοί και τελικοί χρήστες	Τουλάχιστον 7 χρόνια μετά την κυκλοφορία του τελευταίου μοντέλου στην αγορά
Καλάθια	Επαγγελματίες τεχνικοί και τελικοί χρήστες	Τουλάχιστον 7 χρόνια μετά την κυκλοφορία του τελευταίου μοντέλου στην αγορά
Φλάντζες πόρτας	Επαγγελματίες τεχνικοί και τελικοί χρήστες	Τουλάχιστον 10 χρόνια μετά την τελευταία κυκλοφορία μοντέλου στην αγορά

Αγαπητέ πελάτη

- Εάν θέλετε να επιστρέψετε ή να αντικαταστήσετε το προϊόν, παρακαλούμε επικοινωνήστε με το κατάστημα από όπου το αγοράσατε. (Μην ξεχάσετε να φέρετε την απόδειξη αγοράς)
- Εάν το προϊόν σας παρουσιάσει βλάβη που χρειάζεται επισκευή, παρακαλούμε επικοινωνήστε με τον πάροχο υπηρεσιών μετά την πώληση.



ΠΡΟΣΟΧΗ

Οι πληροφορίες μοντέλου στη βάση δεδομένων προϊόντων, καθώς και ο αναγνωριστικός κωδικός μοντέλου, μπορούν να ληφθούν μέσω συνδέσμου ιστού που σαρώθηκε με κωδικό QR, εάν υπάρχει, στην ετικέτα ενεργειακής απόδοσης του προϊόντος.

Για περισσότερες πληροφορίες σχετικά με την ενεργειακή απόδοση της συσκευής, επισκεφθείτε το <https://ec.europa.eu> και αναζητήστε χρησιμοποιώντας το όνομα μοντέλου.

Το όνομα μοντέλου μπορεί να βρεθεί στην ετικέτα αξιολόγησης της συσκευής.

Υπηρεσία Εξυπηρέτησης Πελατών-Διαθεσιμότητα Ανταλλακτικών

Σύμφωνα με την αντίστοιχη διάταξη οικολογικού σχεδιασμού, το χρονικό διάστημα μέσα στο οποίο μπορείτε να απευθύνεστε στο κατάστημα αγοράς για την διάθεση γνήσιων ανταλλακτικών είναι 7 έτη τουλάχιστον από την ημερομηνία αγορά της συσκευής.

Σημείωση: Η χρήση της υπηρεσίας εξυπηρέτησης πελατών είναι δωρεάν, στο πλαίσιο των όρων εγγύησης του κατασκευαστή.

ΓΕΝΙΚΟΙ ΟΡΟΙ ΕΓΓΥΗΣΗΣ ΚΑΙ ΠΡΟΫΠΟΘΕΣΕΙΣ

1. Η εγγύηση καλύπτει κάθε ελάττωμα ή βλάβη που οφείλεται αποκλειστικά στην κατασκευή της συσκευής ή σε ελαττωματικά εξαρτήματα.
2. Κατά τη διάρκεια της εγγύησης η εργασία, τα έξοδα μετακίνησης και τα ανταλλακτικά παρέχονται δωρεάν, καθώς και η μεταφορά της συσκευής αποκλειστικά με τα συνεργαζόμενα πρακτορεία, αν ο τεχνικός κρίνει ότι η επισκευή πρέπει να γίνει στο σέρβις της εταιρείας.
3. Η εταιρεία μας έχει δικαίωμα να καθορίζει τον τρόπο και τον τόπο επισκευής των βλαβών κατά τη κρίση της. Ειδικά το σέρβις των μικροσυσκευών παρέχεται στην έδρα του εκάστοτε συμβεβλημένου καταστήματος σέρβις, η δε μεταφορά τους πραγματοποιείται από τον κάτοχο της συσκευής.
4. Σε περίπτωση αδικαιολόγητης κλήσης, απουσίας, προβλημάτων εγκατάστασης ή ανάγκη επίδειξης λειτουργίας, ο πελάτης επιβαρύνεται με τα έξοδα κίνησης και το κόστος επισκευής του τεχνικού.
5. Η εγγύηση παύει να ισχύει σε περίπτωση που στη συσκευή έχει επέλθει για επιδιόρθωση άλλος τεχνικός, εκτός από τον εξουσιοδοτημένο τεχνικό της εταιρείας μας, ή έχει παραποιηθεί ή απομακρυνθεί το rating label ή ο σειριακός αριθμός της συσκευής.
6. Ενδεχόμενη επισκευή ή αντικατάσταση μερών μίας συσκευής ή της ίδιας της συσκευής δεν παρατείνει τη διάρκεια της εγγύησης, η οποία συνεχίζει σε κάθε περίπτωση έως τη λήξη της.
7. Σε περίπτωση αντικατάστασης κάποιου εξαρτήματος μίας συσκευής, παρέχεται εγγύηση 6 μηνών για το συγκεκριμένο εξάρτημα ή ανταλλακτικό, αρχής γενομένης από την ημερομηνία αντικατάστασης.
8. Η εγγύηση δεν ισχύει για βλάβες που προκαλούνται άμεσα ή έμμεσα από αμέλεια, παράλειψη, κακή χρήση, κακή εγκατάσταση ή πάσης

φύσεως επέμβαση στη συσκευή αυτή από μη εξουσιοδοτημένο συνεργείο. Επίσης, δεν ισχύει για βλάβες που οφείλονται σε εξωγενείς παράγοντες που αλλοιώνουν την υφή της συσκευής (όπως π.χ. χημικά, τοξικά, άλατα κ.τ.λ.), καθώς και για βλάβες προερχόμενες από κακή σύνδεση σε τάση διαφορετική από την αναγραφόμενη στην πινακίδα της συσκευής, σε μη γειωμένο ρευματοδότη (πρίζα) και σε μεταβολές τάσης του δικτύου (πτώση, υπέρταση).

9. Η εγγύηση δεν καλύπτει βλάβες ή απώλειες των συσκευών ή παρελκόμενων τους, που οφείλονται σε μεταφορές, που γίνονται με ευθύνη του πελάτη από τρίτους.
10. Η εγγύηση δεν θίγει τα δικαιώματα του αγοραστή όπως αυτά προβλέπονται βάσει της Ευρωπαϊκής Οδηγίας 1999/44/EC και της Ελληνικής νομοθεσίας.
11. Η εγγύηση πρέπει απαραίτητα να συνοδεύεται από φωτοαντίγραφο του τιμολογίου αγοράς ή του δελτίου λιανικής πώλησης ή του δελτίου αποστολής του προϊόντος.
12. Εκτός των δικαιωμάτων που παρέχονται με την παρούσα εγγύηση στον καταναλωτή, αυτός έχει σε κάθε περίπτωση και όλα τα δικαιώματα που απορρέουν από τις κείμενες διατάξεις και τους νόμους σχετικά με τη σύμβαση πώλησης.

5 ΧΡΟΝΙΑ ΕΓΓΥΗΣΗ

ΕΙΔΙΚΟΙ ΟΡΟΙ:

1. Η εγγύηση καλής λειτουργίας ισχύει από την ημερομηνία αγοράς της συσκευής και έχει διάρκεια πέντε (5) χρόνια.
2. Κάθε συσκευή ελέγχεται προσεκτικά κατά την παραγωγή και δεν γίνεται αντιατάσταση της παρά μόνο σε περίπτωση ανεπανόρθωτης βλάβης ή επαναλαμβανόμενης ίδιας βλάβης ή λόγω υψηλού κόστους της επισκευής, σύμφωνα με την γνωμάτευση του εκάστοτε συμβεβλημένου τεχνικού συνεργάτη.
3. Στην εγγύηση δεν περιλαμβάνονται λαμπτήρες φωτισμού, κεραμικές επιφάνειες, εξεσουάρ, καθώς και τα πλαστικά, επισμαλτωμένα και γυάλινα μέρη των συσκευών, εκτός εάν αποδειχθεί πως πρόκειται για κατασκευαστικό ελάττωμα.
4. Οι ζημιές που προκαλούνται κατά τη μεταφορά της συσκευής δεν καλύπτονται από την εγγύηση.
5. Όλα τα προϊόντα είναι κατασκευασμένα για συνήθη οικιακή χρήση. Η εγγύηση δεν καλύπτει βλάβες που προκύπτουν σε συσκευές που χρησιμοποιούνται στα πλαίσια επαγγελματικής χρήσης.

Εγγύηση

Πριν χρησιμοποιήσετε τη συσκευή, βεβαιωθείτε ότι έχετε διαβάσει τις οδηγίες χρήσης που τη συνοδεύουν.

Σας ενημερώνουμε ότι η συγκεκριμένη συσκευή καλύπτεται από εγγύηση καλής λειτουργίας, για 5 χρόνια, σύμφωνα με τους όρους που προβλέπονται παραπάνω. Αν για οποιοδήποτε λόγο παρουσιαστεί κάποιο τεχνικό πρόβλημα, παρακαλώ όπως επικοινωνήσετε με το:

Τμήμα Τεχνικής Υποστήριξης της Westnet

E-mail: service.ha@mywestnet.com

Τηλεφωνικό κέντρο: +30 211 3002190

Λεωφόρος Μεσογείων 249,

T.K. 154 51

Νέο Ψυχικό – Αθήνα

Παρακαλούμε να έχετε διαθέσιμα σε κάθε περίπτωση τα ακόλουθα:

- Απόδειξη αγοράς
- Περιγραφή προϊόντος/Τύπος/Μάρκα
- Περιγραφή του εμφανιζόμενου προβλήματος με όσο το δυνατόν πιο ακριβή αναφορά του ελαττώματος

Εισάγεται από την

WESTNET DISTRIBUTION ΜΟΝΟΠΡΟΣΩΠΗ Α.Ε ΔΙΑΝΟΜΩΝ ΕΜΠΟΡΙΟΥ
ΒΙΟΜΗΧΑΝΙΑΣ ΠΑΡΑΓΩΓΗΣ

ΕΔΡΑ: ΘΗΒΑΪΔΟΣ 22-Τ.Κ.145 64 ΚΗΦΙΣΙΑ, Α.Φ.Μ.:999645171-Δ.Ο.Υ: Φ.Α.Ε
ΑΘΗΝΩΝ,

ΤΗΛ.: 211 3002150 – FAX: 212 212 19382

Για αποκλειστική διάθεση μέσω της Dedeman Hellas S.A.,
Πειραιώς 176, 177 78 Ταύρος, Αθήνα, www.praktiker.gr

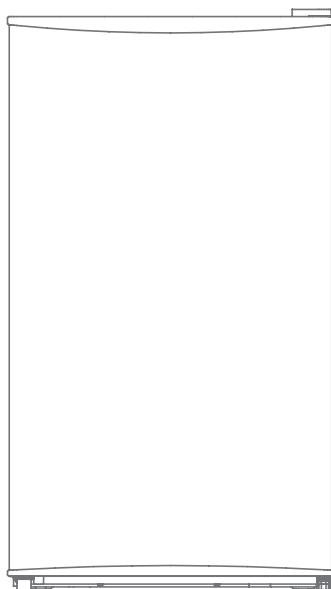


Table-Top Refrigerator

Model: DF1-12N2

5207303339522



> **Warning Notes:** Before using this product, please read this manual carefully and retain it for future reference. The design and specifications are subject to change without notice for product improvement. Please consult your dealer or the manufacturer for details. The above diagram is for reference only. Please take the appearance of the actual product as a standard.

Contents

Important safety instructions	2
Environmental protection.....	5
Install Instruction	6
Product overview	9
Operation Instructions	10
Maintenance and cleaning.....	12
Troubleshooting	14
Appendix	15

Before switching on the appliance for the first time read the following safety hints!

- > This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- > This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Explanation of terms/symbols

	DANGER This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	WARNING The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	CAUTION The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	ATTENTION The signal word indicates important information (e.g. damage to property), but not danger.

IMPORTANT: Pay particular attention to messages that contain the words **DANGER**, **WARNING** or **CAUTION**. These words are used to alert you to a potential hazard that can seriously injure you and others.

The instructions will tell you how to reduce the chance of injury and let you know what can happen if the instructions are not followed.

ATTENTION: These operating instructions are general. This means that certain functions apply to your refrigerator/freezer, while others do not.

We are constantly working on the further development and improvement of our appliance types and models. Therefore, we reserve the right to make changes to the design, equipment and accessories of all types and models without prior notice.

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS!



WARNING: Risk of fire / flammable material

Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm



WARNING

General Safety

- > Children should be supervised to ensure that they do not play with the appliance.
- > If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- > Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- > The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- > **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- > **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- > **WARNING:** Do not damage the refrigerant circuit.
- > **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- > **WARNING:** Please abandon the refrigerator according to local regulators for its use flammable blowing gas and refrigerant.
- > **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- > **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- > Do not use extension cords or ungrounded (two prong) adapters.
- > To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- > The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory. Ensure that the power cable is not trapped by the refrigerator. Do not step on the power cable.
- > For a freestanding appliance: this refrigerating appliance is not intended to be used as a built-in appliance.



CAUTION

Daily use

- > Do not pull the power cord when pulling the power plug of the refrigerator. Please firmly grasp the plug and pull out it from the socket directly.
- > To ensure safe use, do not damage the power cord or use the power cord when it is damaged or worn.
- > Please use a dedicated power socket and the power socket shall not be shared with other electrical appliances.
- > The power plug should be firmly contacted with the socket or else fires might be caused.
- > Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- > Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases.
- > Do not unplug the refrigerator and other electrical appliances considering that spark may cause a fire.
- > Do not use electrical appliances on the top of the appliance, unless they are of the type recommended by the manufacturer.
- > The gaps between refrigerator doors and between doors and refrigerator body are small, be noted not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when close the refrigerator door to avoid falling articles.
- > Do not pick foods or containers with wet hands in the freezing chamber when the refrigerator is running, especially metal containers in order to avoid frostbite.
- > Do not allow any child to get into or climb the refrigerator; otherwise suffocation or falling injury of the child may be caused.
- > Do not place heavy objects on the top of the refrigerator considering that objectives may fall when close or open the door, and accidental injuries might be caused.
- > Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- > Do not place flammable items near the refrigerator to avoid fires.
- > The refrigerator is intended for household use, such as storage of foods; it shall not be used for other purposes, such as storage of blood, drugs or biological products, etc.
- > Do not store beer, beverage or other fluid contained in bottles or enclosed containers in the freezing chamber of the refrigerator; or otherwise the bottles or enclosed containers may crack due to freezing to cause damages.



WARNING

- > Connect to potable water supply only. (Suitable for ice cube maker) (*)
- > To prevent children from being entrapped, the keys must be kept out of reach of children and not in the vicinity of chest freezer (or refrigerator) (suitable for products with locks).(*)

(*) : This feature varies depending on the model purchased.



WARNING

For EU standard:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days. **(Note 1)(*)**
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes. **(Note 2)(*)**
- 1 star, 2 star and 3 star compartments are not suitable for the freezing of fresh food. **(note 3)(*)**
- For appliances without a 4-star compartment: this refrigerating appliance is not suitable for freezing foodstuffs. **(note 4)(*)**
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Note 1,2,3,4: Please confirm whether it is applicable according to your product compartment type.

(*): This feature varies depending on the model purchased.



"4 star" symbol: Freezer at -18 °C or colder, and it has the ability of quick freezing a certain amount of food



"3 star" symbol: Freezer compartment at -18 °C or colder



"2 star" symbol: Freezer compartment at -12 °C or colder



"1 star" symbol: Freezer compartment with a target temperature and storage conditions of -6 °C



CAUTION

This product is not recommended for use with sockets or main switch with the AFCI/GFCI function, otherwise it may cause false tripping.

1. It's not pose a safety risk when tripped.
2. If tripping persists, it is recommended to replace the sockets or main switch without AFCI/GFCI function.



WARNING

Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- > Take off the doors.
- > Leave the shelves in place so that children may not easily climb inside.

ENVIRONMENTAL PROTECTION

Disposing of old electrical devices in an environmentally-friendly manner



This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.

Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.

Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

CAUTION

Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.

INSTALL INSTRUCTION

Before first use

Remove the exterior and interior packing, wipe the outside thoroughly with a soft dry cloth and the inside with a wet, lukewarm cloth.

Avoid placing the cabinet in a narrow recess or near any heat source, direct sunlight, or moisture.


Keep the air circulation free around the cabinet. When installing the unit, ensure 10cm of free space at both sides, 10cm at the top of the unit, and not more than 7.5cm at the rear of the unit.

Before connecting your refrigerator to the power supply, check that the voltage stated on the rating label of your appliance corresponds to the voltage in your home. A different voltage could damage the appliance.

The appliance must be grounded. The manufacturer is not responsible for damages that may occur as a result of usage without grounding.

Connecting the appliance

After installing the product, please let it stay for more than 2 hours before turning on the power, otherwise it will lead to a decrease in cooling capacity or a damage to the product.

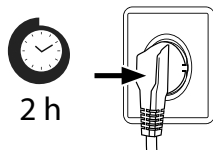


Allow the appliance to run empty for 24 hours so the compartment can cool to the appropriate temperature.

⚠ CAUTION

The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. When positioning the appliance, ensure the supply cord is not trapped or damaged.

Space requirement diagram

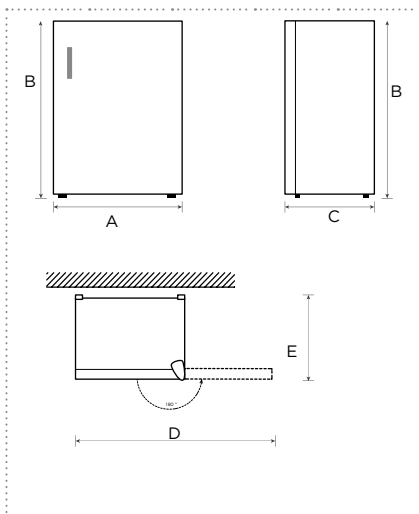

A	B	C	D	E
475	845	445	921	540

Notice: All dimensions in mm

Ambient Temperature

Depending on the climate class, this refrigerator is intended to be used at an ambient temperature range as specified in the following table.

The product may not operate properly at temperatures outside of the specific range.

You can find the climate class on the product label.

Climate Class	Ambient Temperature
SN	+10 °C to +32 °C
N	+16 °C to +32 °C
ST	+16 °C to +38 °C
T	+16 °C to +43 °C

If you have any doubts regarding installation, please turn to the vendor, to our customer service or to the nearest Authorised Service Centre.

💡 ATTENTION

The cooling performance and power consumption of the refrigerator may be affected by the ambient temperature, the door-opening frequency, and the location of the refrigerator. We recommend adjusting the temperature settings as appropriate.

Moving the appliance

1. Remove all items from the appliance.
2. Pull the power plug out, insert and fix it into the power plug hook at the rear or on top of the appliance.
3. Tape parts such as shelves and the door to prevent from falling off while moving the appliance.
4. Move the appliance with more than two people carefully. When transporting the appliance over a long distance, keep the appliance upright.

Leveling feet

To avoid vibration, the appliance must be leveled.

If required, adjust the leveling feet to compensate for the uneven floor.

The front should be slightly higher than the rear to aid in door closing.

Leveling feet can be turned easily by tipping the cabinet slightly.

Turn the leveling feet counter clockwise  to raise the unit, clockwise  to lower it.

Changing the light

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.

This product contains a light source of energy efficiency class (G).



ATTENTION

After connecting the power supply cord (or plug) to the outlet, wait 2 or 3 hours before you put food into the appliance. If you add food before the appliance has cooled completely, your food may spoil.

Tips for energy saving

Do not place the appliance near cookers, radiators or other heat sources. If the ambient temperature is high, the compressor will run more frequently and for longer, resulting in increased energy consumption.

Ensure that there is sufficient ventilation at the base of the appliance, on the sides of the appliance and at the back of the appliance.

Please also observe the spacing dimensions in the chapter "Installation".

The arrangement of drawers, shelves and trays as shown in the product overview offers the most efficient use of energy and should be retained as far as possible.

To obtain a larger storage space (e.g. for large refrigerated/frozen goods), the middle drawers and shelves can be removed. The top and bottom drawers and shelves should be removed last if necessary.

An evenly filled refrigerator/freezer compartment contributes to optimal energy use.

Allow warm food to cool before placing it in the refrigerator/freezer compartment. Food that has already cooled down increases energy efficiency.

Allow frozen food to defrost in the refrigeration compartment. The coldness of the frozen food reduces the energy consumption in the refrigerator compartment and thus increases the energy efficiency.

Open the door only as briefly as necessary to minimise cold loss. Opening the door briefly and closing it properly reduces energy consumption.

Setting the temperature no colder than necessary contributes to optimal energy use.

The door gaskets of your appliance must be perfectly intact so that the doors close properly and energy consumption is not increased unnecessarily.


Door Right-Left Change

List of tools to be provided by the user


	Cross screwdriver
	Thin-blade screwdriver
	5/16" socket spanner
	Masking tape

Step:


1. Power off the refrigerator, and remove all objects from the door trays;
2. Dismantle the hinge cover, screws and upper hinge, and remove the hole cap and pins from the other side;

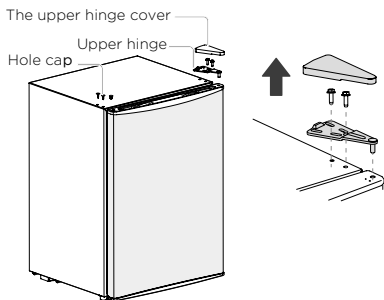


3. Remove the door first, then remove the lower hinge assembly and leveling foot, interchange the positions of the lower hinge assembly and leveling foot and install them;

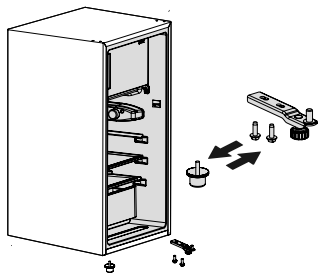

4. Dismantle the stopper under the door, then assemble the stopper on the other side;

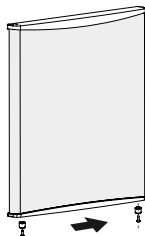


5. Install the door on the lower hinge assembly, and then install the upper hinge, hinge cover, pins and hole cap in sequence.

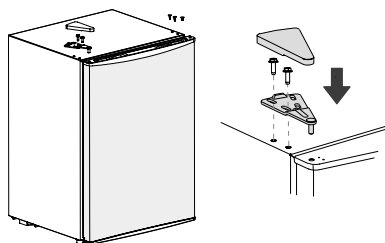

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor

PRODUCT OVERVIEW

Parts and functions

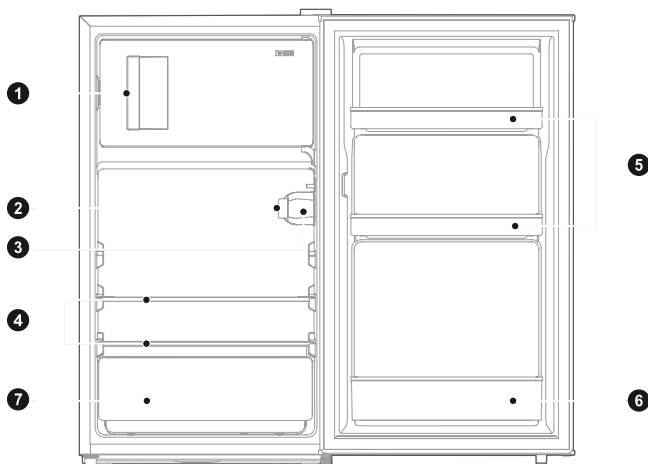

- | | | | |
|---|--------------------------|---|---------------------------|
| 1 | Little door | 5 | Small trays |
| 2 | Temperature control knob | 6 | Large tray |
| 3 | Lamp | 7 | Fruits and vegetables box |
| 4 | Shelves | | |

- > For the most efficient use of energy, please keep the all internal items such as trays, drawers, shelves and ice cube box on the position supplied by manufacturer.
- > This refrigerating appliance needs to be installed independently and cannot be used as a built-in. Otherwise, it will cause problems such the performance and life of the appliance are reduced. And the manufacturer does not provide basic appliance warrant.

ATTENTION


Differences: Due to technical changes and different models, some of the illustrations in this manual may differ from your model.

OPERATION INSTRUCTIONS

Use and functions


Feature panel

1

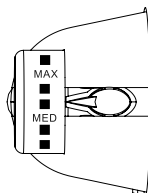

- > Turn the temperature control knob to **MAX**, the internal temperature of the refrigerator becomes lower.
- > Turn the temperature control knob to **MIN**, the internal temperature of the refrigerator becomes higher.
- > The letter on the knob only represents the level, but does not mean the specific temperature, the "**OFF**" means stop working.
- > Recommended gear: "**MED**".
- > If there is no special needs, please avoid setting the gear at **MAX** all the time so as to make sure you can prevent the tank bladder from frosting.

2

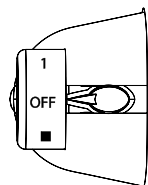

The figures do not mean specific set temperature, but the temperature level.

- > "**1**" means the warmest setting.
- > "**4**" means the coldest setting.
- > The higher the figure is, the lower the actual temperature inside refrigerator shall be, "**OFF**" means stop running.
- > Recommended gear: "**3**" gears.
- > It is recommended to adjust and use in the range if **1-4** gears. Exceeding this range may cause the refrigerator temperature to be low.



ATTENTION

The actual control panel may differ from model to model.

Storing food

Freezer compartment

The freezer compartment is designated for the low-temperature freezing of food, long-term storage of frozen food, and for the production of ice cubes.

Pay attention to the star classifications (4 star, 2 star and 1 star) in the freezer compartment and the resulting storage periods for frozen food.

Do not put fresh and frozen food next to each other. The frozen food may thaw.

When freezing large amounts of fresh food (such as meat, fish or chopped meat), please divide them into several small pieces before putting in, so that they can be quickly frozen and pick up easily.

Abide by the storage times recommended by food manufacturers on the packages, there is no information on the packaging, food should not be stored frozen for longer than three months from the date of purchase.

When purchasing frozen food, make sure that it was frozen at a suitable temperature and that the packaging is not damaged.

Frozen food should be kept in suitable individual packages to ensure that adjacent food cannot be contaminated. Consume thawed and defrosted foods immediately, do not refreeze them.

In case of prolonged power failure or malfunction of the appliance, remove the stored frozen food and check whether they are still edible, then store them in a sufficiently cool place or in another appliance.

To defrost food, remove it from the freezer and let it defrost at room temperature or in the refrigerator. To defrost food quickly, you can use the defrost function on your microwave, for example.

If you only want to defrost part of a pack, remove the portion you need and immediately close the rest of the pack. In this way, you will avoid "freezer burn" and will reduce ice formation on the remaining foods.

Cooling compartment

To reduce moisture and subsequent ice build-up, never put liquid into the fridge compartment in unsealed containers. Frost tends to concentrate in the coolest parts of the evaporator. Storing uncovered liquids results in a more frequent need for defrosting.

Never put warm foods in the fridge compartment. These should first cool down at room temperature and then be placed so as to ensure adequate air circulation in the fridge compartment.

Foods or food containers should not touch the back wall of the fridge because they could freeze to the wall. Do not keep regularly opening the door of the refrigerator.

Meat and clean fish (packed in a package or plastic foil) can be placed in the fridge compartment, which can be used in 1-2 days.

Fruit and vegetables without packaging can be placed in the part designated for fresh fruit and vegetables.

ATTENTION

Storage of too much food during operation after the initial connection to power may adversely affect the freezing effect of the refrigerator.

Storage times and temperature

Note: Overlong storage or storage at inappropriate freezing temperature may cause a quality loss or spoiled foods, which causes food waste, is inedible and may cause food poisoning. The minimum temperature in most cases should be -18°C or colder. Follow the maximum recommended storage times below:

- > Stew, ice cream, sausages, bread: 2-6 months.
- > Fish, shrimp, lamb, meat: 4-8 months.
- > Vegetables, fruits, poultry, beef: 6-12 months.

MAINTENANCE AND CLEANING



CAUTION

Disconnect the appliance from the electrical supply before undertaking any routine maintenance. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Do not try to repair, disassemble or modify the appliance by yourself. In case of repair please contact our customer service.

Eliminate the dust on the back of the unit at least once in the year to avoid hazard by fire, as well as increased energy consumption.

Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.

The interior of the product should be cleaned regularly to avoid odor.

Use a soft cloth or sponge to clean the inside of the product, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.

For areas that are difficult to clean in the product (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacteria accumulation in these areas.

Wipe the outer surface of the product with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.

Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, Isoamyl acetate, etc.), boiling water, acid or alkaline items, which may damage the fridge surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.



Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.

● ATTENTION

The appliance shall run continuously once it is started. Generally, the operation of the appliance shall not be interrupted; otherwise the service life may be impaired

Defrosting


While the refrigerating unit is running, beads of condensation or hoarfrost form at the back of the refrigerator compartment. This is normal. It is not necessary to wipe off the condensation or frost. The rear panel defrosts automatically. The condensation runs into the condensation channel and is conveyed to the refrigerating unit where it evaporates.

Note: Keep the condensation channel and drainage hole clean, so that the condensation can run out.

Cleaning of door tray


According to the direction arrow in the figure below, use both hands to squeeze the tray, and push it upward, then you can take it out.

After washing the tray having been taken out, you can adjust its installing height in accordance with your requirement.

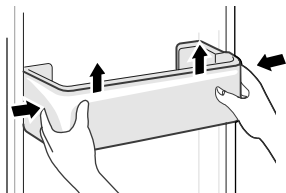

Cleaning the vegetable drawer


1. Remove the contents of the drawer. Hold the handle of the vegetable drawer and pull it out completely until it stops.
2. Lift the vegetable drawer up and remove it by pulling it out.

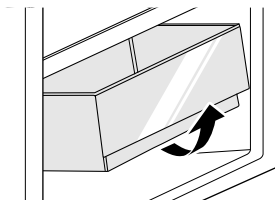

Cleaning of glass shelf

As the innermost part of the refrigerator liner where contacting the shelves has a backstop, you shall raise the shelves upward, then you can be able to take it out.

Adjust or clean the shelves according to your requirement.

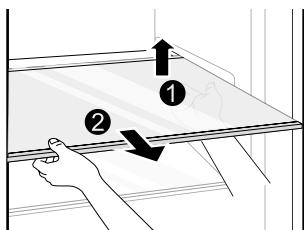

TROUBLE SHOOTING

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not solved.

Problem	Possible Causes	Solution
Not operate	- The power supply is not turned on and the plug is not firmly inserted. - Low voltage, power failure or part of the circuit tripped.	- Insert the power cord plug firmly. - Check the power supply at home.
Compressor working for a long time	- High ambient temperature causing long working time. - Putting too much food in at one time. - Food is put in before it has cooled down. - Opening the door too often. - The frost layer inside is too thick.	- This is normal. - Do not put too much food in at one time. - Wait until the food has cooled down before putting it in. - Do not open the door too often. - Need to defrost.
Door does not close properly	- Door is stuck with objects. - Too much food in. - Door gasket deformed.	- Do not put in too much food. - Place the appliance stably. - Heat the door gasket, then cool it for restoration (with an electrical drier or hot water for heating).
Outer wall is hot	- When the appliance is operating, heat is dissipated to the outside through the metal tubes inside the cabinet. - Higher ambient temperatures in the summer cause the temperature of the outer wall to rise.	- Higher temperature on the outer wall is normal. - Increase the heat dissipation space, or put the appliance in a ventilated and cool place.
Odors	- Spoiled food - Food with strong odors - The interior compartment is dirty.	- Clean and remove any spoiled food. - Make sure strong smelling food is wrapped airtight. - Clean the interior compartment.
Condensation forms on the outside	Condensation may form when the humidity in the room is high.	This is normal. Wipe off the condensation using a dry cloth.
Hard to open the door	The difference in air pressure between the inside and outside of the compartment may sometimes make it hard to open the freezer door.	Wait a few moments, and then try to open the door slowly.

Certain sounds can be heard during normal use of the refrigerator, which do not affect its correct operation.

Sounds, which can be easily prevented:

- > Noise caused by the appliance which is not level - adjust the position with the adjustable turn-in front feet. Alternatively, place pads made of soft material under the rear rollers, especially when the appliance is placed on tiles.
- > Touching the adjacent piece of furniture - move the refrigerator away.
- > Creaking of the drawers or shelves - take out and put back the drawer or shelf.
- > Sounds of clinking bottles - move bottles apart.

Sounds heard during normal use are mainly due to operation of the compressor (switching on) and cooling, system (thermal expansion and contraction of the radiator caused by flow of the cooling agent).

APPENDIX

Special for new European standard

The ordered parts in the following table can be acquired from Service provider channel

Ordered part	Provided by	Minimum time required for Provision
Thermostats	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Temperature sensors	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Printed circuit boards	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Light sources	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Door handles	Professional repairers and final users	At least 7 years after the last model is launched on the market
Door hinges	Professional repairers and final users	At least 7 years after the last model is launched on the market
Trays	Professional repairers and final users	At least 7 years after the last model is launched on the market
Baskets	Professional repairers and final users	At least 7 years after the last model is launched on the market
Door gaskets	Professional repairers and final users	At least 10 years after the last model is launched on the market

Dear customer

1. If you want to return or replace the product, please contact the store where you buy.
(Remember to bring the purchase invoice)
2. If your product breaks down which needs to repair, please contact after-sales service provider.



ATTENTION

The model information in the product database, as well as the model identifier, can be obtained through a weblink scanned by a QR code, if any, on the energy efficiency label of the product.

For more information about the energy efficiency of the appliance, visit <https://ec.europa.eu> and search using the model name.

The model name can be found on the rating label of the appliance.

Customer Service – Spare Parts Availability

According to the relevant ecological design regulation, the period during which you can contact the store of purchase for the supply of genuine spare parts is at least 7 years from the date of purchase of the device.

Note: The use of customer service is free of charge, within the terms of the manufacturer's warranty.

GENERAL WARRANTY TERMS AND CONDITIONS

1. The warranty covers any malfunction or defect that is solely due to the construction of the appliance or to defective components.
2. During the warranty period, labor, transportation costs, and spare parts are provided free of charge. Transportation of the appliance is also covered, provided it is carried out by authorized transport agencies and only if the technician determines that the repair must take place at the company's service center.
3. The company reserves the right to determine the method and place of repair at its discretion. Specifically, the servicing of small appliances is provided at the location of the respective authorized service store, and their transportation is the responsibility of the device owner.
4. In cases of unjustified service calls, absence, installation issues, or the need for operational demonstrations, the customer will be charged for travel and service costs.
5. The warranty is void if any repair is carried out by a technician not authorized by our company, or if the rating label or the appliance's serial number has been tampered with or removed.
6. Any repair or replacement of parts or the entire appliance does not extend the original warranty period, which continues until its initially stated expiration.
7. In the event of a part replacement, a six-month warranty is provided for the specific part or spare component, starting from the replacement date.
8. The warranty does not apply to damage caused directly or indirectly by negligence, omission, misuse, poor installation, or any form of tampering by unauthorized service personnel. It also does not apply to damage caused by external factors that alter the

appliance's integrity (e.g., chemicals, toxins, salts, etc.), or to damage resulting from improper voltage connection, non-grounded sockets, or voltage fluctuations (drops, surges).

9. The warranty does not cover damage or loss of the appliance or its accessories resulting from transportation carried out by third parties under the customer's responsibility.
10. This warranty does not affect the buyer's rights as provided under European Directive 1999/44/EC and Greek legislation.
11. The warranty must be accompanied by a copy of the purchase invoice, retail receipt, or shipping document of the product.
12. In addition to the rights granted under this warranty, the consumer retains all rights provided by applicable laws and regulations relating to the sales contract.

5 YEAR WARRANTY

SPECIAL TERMS:

1. The warranty of proper operation is valid from the date of purchase of the appliance and has a duration of five (5) years.
2. Each appliance is carefully inspected during production and is not replaced unless there is an irreparable fault, recurring identical malfunction, or excessive repair cost, according to the diagnosis of the respective authorized technical partner.
3. The warranty does not cover light bulbs, ceramic surfaces, accessories, as well as plastic, enamel-coated, or glass parts of the appliances, unless it can be proven that the issue is due to a manufacturing defect.
4. Damage caused during transportation of the appliance is not covered by the warranty.
5. All products are manufactured for standard household use. The warranty does not cover damage that occurs in devices used for professional purposes.

Warranty

Before using the appliance, please ensure that you have read the user manual that accompanies it.

We would like to inform you that this appliance is covered by a 5 year warranty for proper operation, in accordance with the terms outlined above. If any technical issues arise for any reason, please contact us at:

Westnet Technical Support Department

Email: service.ha@mywestnet.com

Phone Center: +30 211 3002190

Address: 249 Mesogeion Avenue,

Postal Code: 154 51

Nea Psychiko – Athens

Please have the following available in every case:

- Receipt of purchase
- Product description/Model/Brand
- Description of the issue with the most accurate possible reference to the defect

Imported by

WESTNET DISTRIBUTION SINGLE MEMBER S.A. DISTRIBUTOR OF TRADE,
INDUSTRY, AND MANUFACTURING

HEADQUARTERS: 22 THIVAIDOS STREET, POSTAL CODE: 145 64 KIFISIA,
VAT: 999645171 - Tax Office: F.A.E. ATHENS, Phone: +30 211 3002150 –
Fax: +30 212 212 19382

For exclusive distribution through Dedeman Hellas S.A.,
176 Pireos Street, Postal Code: 177 78 Tavros, Athens, www.praktiker.gr

